



ASSEMBLY INSTRUCTIONS

BM41004 / BM41005/ BM41006 AVA MORGANA CABINET





Thank you for your purchase!

PART CHECK LIST

CODE	COMPONENT	QTY
A	Body	1
B	Right Leg Frame	1
C	Left Leg Frame	1
D	Top Stretcher	2
E	Bottom Stretcher	2

HARDWARE CHECK LIST

CODE	COMPONENT	QTY
01	Allen Bolt	16
02	Bolt	08
03	Spring Swasher	08
04	Flat Swasher	08
05	Allen Key	01

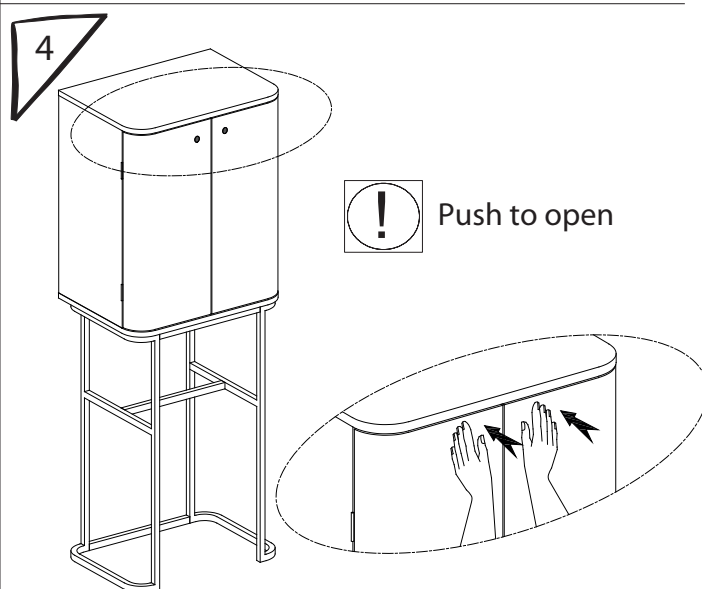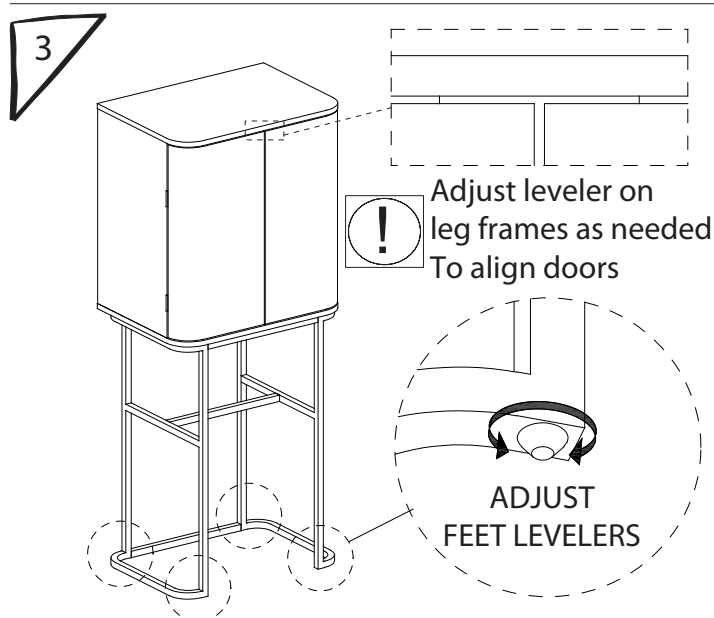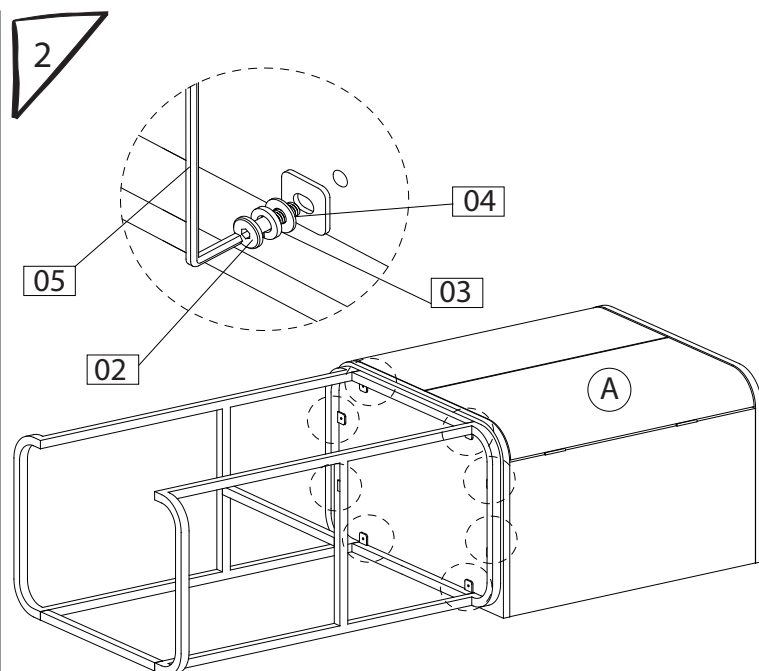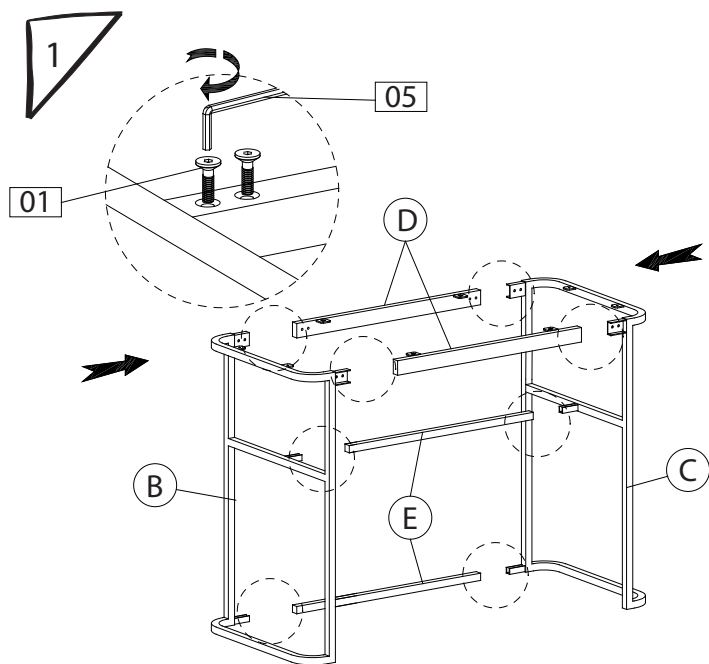



ASSEMBLY INSTRUCTIONS

BM41004 / BM41005/ BM41006 AVA MORGANA CABINET

Thank you for your purchase!

TIPPING KIT CHECK LIST

CODE	COMPONENT	QTY
01	Plastic Strap	2
02	Screw	8
03	Nylon Wall Plug	4
04	Plastic Bracket	4

5

